- 1 PRE-FILTER HANDLE.
- 2 PRE-FILTER INSPECTION COVER.
- 3 INSPECTION COVER SEAL
- 4 PRE-FILTER BASKET
- 5 PRE-FILTER
- 6 PRE-FILTER-BODY BOLT
- 7 PRE-FILTER-BODY NUT
- 8 PUMP BODY
- 9 FILLING BOLT
- 10 EMPTYING BOLT
- 11 IMPELLER NUT
- 12 IMPELLER
- 13 PIN
- 14 MECHANICAL SEAL
- 15 PUMP BODY O-RING
- 16 MOTOR PUMP SUPPORT
- 18 MOTOR SUPPORT BOLT.
- 19 MOTOR SUPPORT NUT FOR BOLT
- 23 COUPLING SHAFT
- 24 COUPLING SUPPORT BOLT
- 25 COUPLING COVER
- 26 COUPLING COVER FIXING BOLT
- 28 IMPELLER SEPARATOR
- 31 MOTOR PUMP SUPPORT CLAMP
- 32 THREADED PIN NUT.
- 32A THREADED PIN
- 33 FRONT MOTOR COVER.
- 34 FRONT BEARING.
- 35 ROTOR SHAFT.
- 36 REAR BEARING
- 37 STATOR WITH HOUSING
- 38 TERMINAL BOX GASKET
- 39 TERMINAL BOX
- 40 JUNCTION COVER SEAL
- 41 JUNCTION COVER
- 42 JUNCTION COVER BOLT
- 43 LASAJE WASHER
- 44 MOTOR REAR COVER
- 45 REAR COVER BOLT
- 46 MOTOR REAR COVER RETAINER
- 46A MOTOR FRONT COVER RETAINER
- 47 VENTILATOR
- 48 VENTILATOR COVER

